

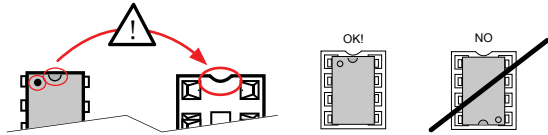



### OUTPUT

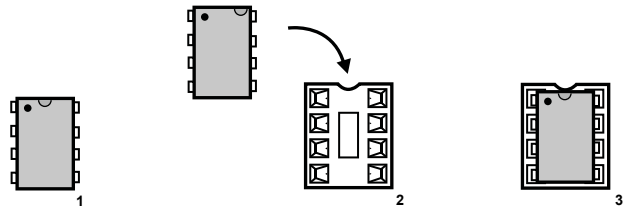



3590

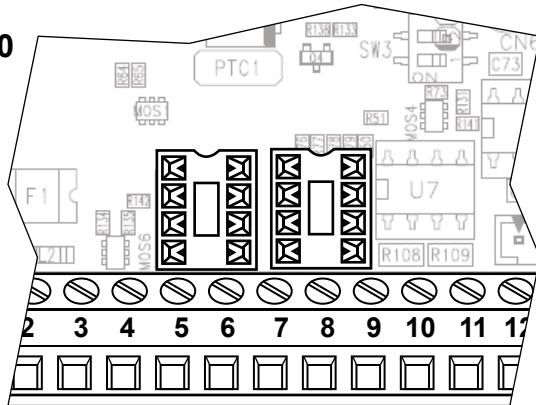


DGTQ

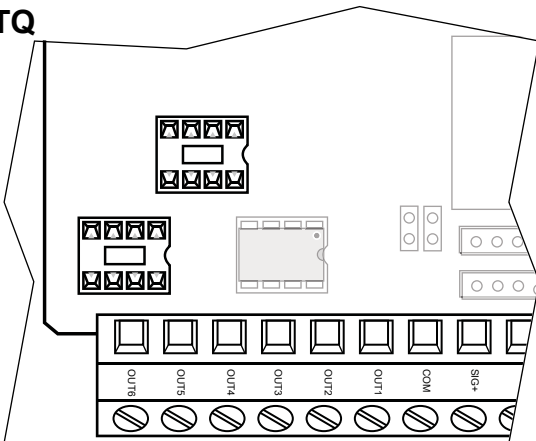


### INPUT

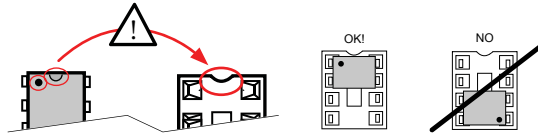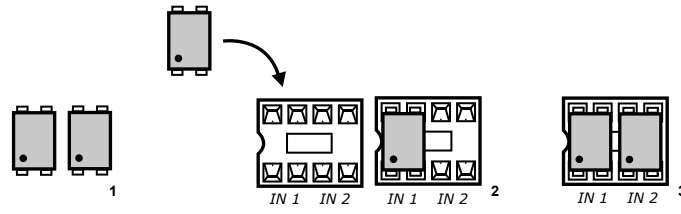


3590

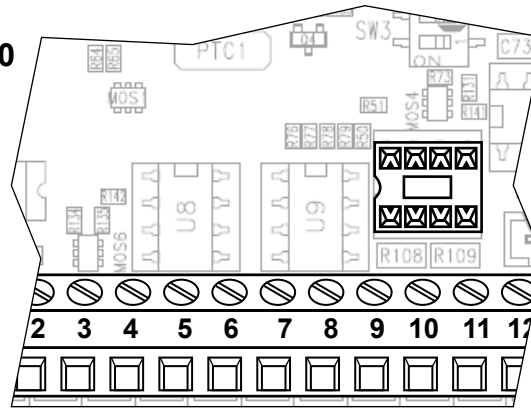


### RS485

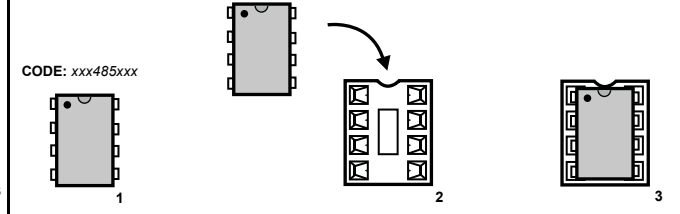


CODE: xxx485xxx

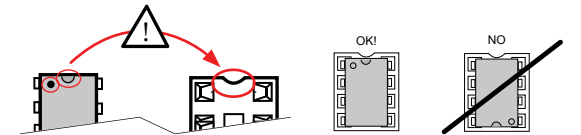

3590

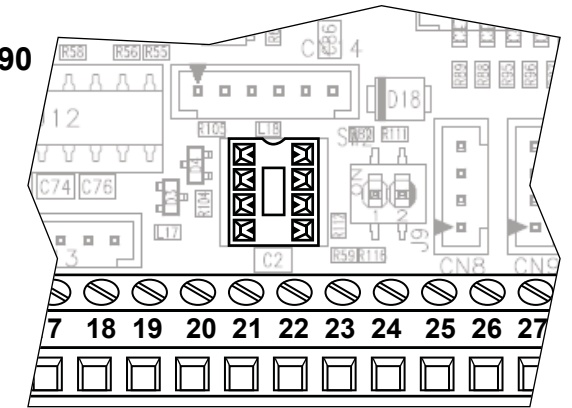

DFWL

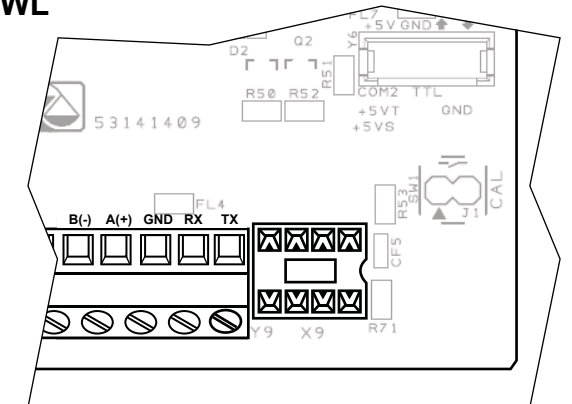

*Interface  
installation guide*



Ver. 01.00

## WARNINGS



- Before operate, please read this guide and follow the indications
- Please manage with care
- Avoid electrostatic shocks
- Before installing, turn the indicator off and disconnect the main power
- Avoid any wrong mounting, it can compromise the interface
- After installing, please read the indicator's technical manual for the configuration.

## ATTENTION

OBSERVE PRECAUTIONS FOR HANDLING  
ELECTROSTATIC SENSITIVE DEVICE

